

Equipment and
people; We deliver
the **best of both.**

AXIS PORTABLE AIR
33 SOUTH 56TH STREET
CHANDLER, AZ 85226



MOVINCOOL: TROUBLESHOOT

If you are seeing a lock icon on the screen preventing you from navigating the menu system, follow the following steps to unlock the unit.



1. Hold the top right button on the LCD screen for (6) seconds.
2. Wait (3) second to return to the home screen.
3. This will unlock the unit.

Watch a video: www.axisair.com/help